



TX ANT	Press to listen on TX antenna	Red LED is on
RX antennas	Press quickly to select RX antenna	Green LED is ON
	Hold button more than 2 s to send voltage to RX antenna	Orange LED is ON
BAND	Press quickly to manually select band	
AUTO	Hold button more than 2 s to select AUTO mode (Connect BAND signals on BAND DECODER connector on rear panel)	
AMP	Hold button more than 2 s to enable internal preamplifier	
SN Check	Hold button more than 2 s to load unit with 50 Ohm	
Att	Press to enable ATT	



USB	For programming new firmware	
BAND Decoder	Connect BAND signals from an external Band decoder	
RX ANT's	For use with SAC X	
RX Out	To TRCV RX in line	
RX in	To TRCV RX out line	
ANT 1-4	RX antennas inputs	