

Port A and Port B are different contact of DPDT relays, and each port can be used **differently** - to supply internal 12V (Not recommended), any external voltage (to be connected to P26, with soldering two wires), or GND.

Internal voltage is used for testing and programming, and it is strongly recommended to use proper external power supply and to set jumpers at EXT. Internal power supply in SSC XL is designed for 1A, which is on the margin if all relays are in use.

