

# Antenna Genius Quick Start Guide

Current app version: 4.1.0; Current firmware version: 4.1.0; Rev 01

## Power

AG requires anywhere from 12 to 14 VDC and at least 300 mA of power. Connect AG to your shack 13.8 VDC power supply paying attention to proper polarity.



## Antenna Ports

Antenna Ports are numbered from 1 to 8. Outer (top and bottom) antenna ports are best suited for highest frequencies and the middle antenna ports for lowest frequencies.

## Radio Ports

Radio Ports have the same isolation and can be used interchangeably.

## PTT Ports

PTT Ports are designed to prevent hotswitching while transmitting.

## Band Data Configuration



From version 4 the band sources are set using the Windows app. There are three band source options available:

- **LAN Control** is used for obtaining band data from a FlexRadio. Use the Windows app to find your FlexRadio and connect AG to it. This mode is also used for selecting antennas manually by mouse clicks. If you wish to use this functionality configure your antenna port band as *None*.
- **BCD** protocol is used by traditional radios. Connector pinout is found at the end of the chapter.

Band	160M	80M	40M	30M	20M	17M	15M	12M	10M	6M	None
Frequency	1.8	3.5	7	10	14	18	21	24	28	50	None
Band A	H	L	H	L	H	L	H	L	H	L	L
Band B	L	H	H	L	L	H	H	L	L	H	L
Band C	L	L	L	H	H	H	H	L	L	L	L
Band D	L	L	L	L	L	L	L	H	H	H	L
Hex Code	1	2	3	4	5	6	7	8	9	A	0

BCD Table

- **PTP** is used by 4O3A manual controllers. Expected control signal is +12VDC. The pinout table is found below.

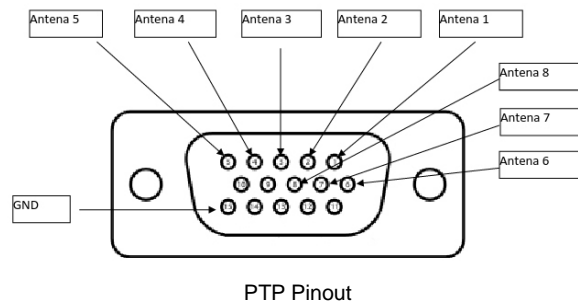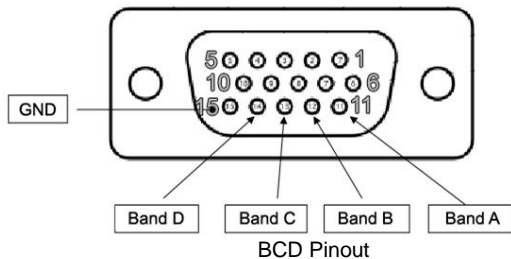

## Network Settings

AG expects a DHCP server on the network in order to obtain an IP address. A static address can be set using the Windows app.

If no DHCP server is found on the network AG will assign itself the Automatic Private IP Address. The AG Windows Utility app will still be able to find your AG on the network.

## Windows App / Firmware Update

Download the latest version of the AG Windows App from our support page under Antenna Genius:  
<http://www.4o3a.com/support/downloads/>

The latest firmware file is included in the app. Use the Firmware Upgrade option from the configuration menu to upgrade your AG to the latest firmware.

**WARNING:** Never use a wireless or remote connection to upgrade firmware on any 4O3A device due to risks of bricking.  
Please use a wired local ethernet connection instead.

You can reset the IP and Configuration settings at any time by setting the **DIP7** to **ON** while powering up.

## Help and Support

Find the complete **AG User Guide** on our support page under Antenna Genius:  
<https://4o3a.com/support/downloads>

Join our discussion board and meet our community on our google forums:  
<https://4o3a.com/forum>

Write to us directly on our support email: [support@4o3a.com](mailto:support@4o3a.com)